Important TE 2000 Information!

Using Intermec's TE 2000TM terminal emulation application, you can choose to run any emulation (5250, VT/ANSI, 3270). 3270 is the default emulation that is running on your terminal, which may be different than the emulation you ordered. However, your terminal will have an emulation-specific keypad overlay. To change the emulation, follow the procedure in this instruction sheet.

VT/ANSI (TE 2000 v6.11 or earlier) If your Trakker Antares® terminal has a scanner, the scanner is disabled until you connect to a host. For help configuring the terminal so that it will connect to a host, see your Trakker Antares terminal getting started guide.

5250 or 3270 If your Trakker Antares terminal has a scanner, the scanner is disabled until you enable the scanner to scan all fields. For help enabling the scanner to scan all fields, follow the procedure in this instruction sheet.

To change to a different emulation and to enable the scanner to scan all fields

1. On your terminal, press f o to access the TE menu. On the 2415 with the 37-key keypad, press f 5. The Main Menu appears.

Main Menu 1) Set-up Parms 2) LCD Parms 3) 4) Tests 5) Version Info 6) Exit Menus 7) More

TE24XXI001.eps

- 2. Press 1. The Enter Password prompt appears.
- 3. Type C R 5 2 4 0 1 and press enter... The Set-up Parms menu appears.
- 4. Press 3. The Protocol Opts menu appears.
- 5. Press 2. The Data Stream menu appears.
- To run 3270 terminal emulation, press 2.
 To run 5250 terminal emulation, press 3.
 To run VT/ANSI terminal emulation, press 4.

7. Configure the terminal to scan all fields.

(5250)

- a. Press enter ... You return to the Protocol Opts menu.
- b. Press 4. The 5250 menu appears.
- c. Press 4. A dark box appears around the Scan All Flds option that indicates that this option is enabled.

(3270)

- a. Press [enter --]. You return to the Protocol Opts menu.
- b. Press 5. The 3270 menu appears.
- c. Press 7 to access more menus.
- d. Press 1. A dark box appears around the Scan All Flds option that indicates that this option is enabled.
- 8. Press enter until the Set-up Parms menu appears.
- 9. Press 7 to access more menus.
- 10. Press 2 to save your changes. The Enter Password prompt appears.
- Parms menu.
- 12. Press 6 to exit the TE menu.

For help using TE 2000, these manuals are available:

TE 2000	User's Manual	Part No.
VT/ANSI	TE 2000 VT/ANSI Terminal Emulation Programmer's Guide	977-055-005
5250	TE 2000 5250 Terminal Emulation Programmer's Guide	977-055-004
3270	TE 2000 3270 Terminal Emulation Programmer's Guide	977-055-003

To download any of the manuals in PDF format, please visit our Web site at www.intermec.com. To order printed versions of these manuals, contact your local Intermec representative or distributor.



6001 36th Avenue West P.O. Box 4280 Everett, WA 98203-9280

© 2000 Intermec All Rights Reserved

Part No. 070138-004

