

Intermec



Quick Start Guide



**Model 70
Pocket PC 2002**

Intermec Technologies Corporation
6001 36th Avenue West
Everett, WA 98203

U.S. service and technical support: 1-800-755-5505
U.S. media supplies ordering information: 1-800-227-9947
Canadian service and technical support: 1-800-668-7043
Canadian media supplies ordering information: 1-800-268-6936

Outside U.S.A. and Canada: Contact your local Intermec service supplier.

The information contained herein is proprietary and is provided solely for the purpose of allowing customers to operate and/or service Intermec manufactured equipment and is not to be released, reproduced, or used for any other purpose without written permission of Intermec.

Information and specifications in this manual are subject to change without notice.

© 2002 by Intermec Technologies Corporation
All Rights Reserved

The word Intermec, the Intermec logo, INCA (under license), MobileLAN, JANUS, IRL, Trakker Antares, EZBuilder, TE 2000, Data Collection Browser, dcBrowser, Universal Access Point, UAP, Duratherm, EasyCoder, Precision Print, PrintSet, Virtual Wedge, and CrossBar are either trademarks or registered trademarks of Intermec.

Microsoft, MS, ActiveSync, Active Desktop, Outlook, Windows, Windows NT, and the Windows CE logo are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Microsoft products are licensed to OEMs by Microsoft Licensing, Inc., a wholly owned subsidiary of Microsoft Corporation. CIC and Jot are registered trademarks or trademarks of Communication Intelligence Corporation.

Throughout this manual, trademarked names may be used. Rather than put a trademark (™ or ®) symbol in every occurrence of a trademarked name, we state that we are using the names only in an editorial fashion, and to the benefit of the trademark owner, with no intention of infringement.

There are U.S. and foreign patents pending.

Contents

<i>Learning About the Model 70</i>	5
<i>Getting the Model 70 Up and Running</i>	5
<i>Charging the Batteries</i>	6
<i>Turning on Power</i>	7
<i>Following the Setup Wizard</i>	7
<i>Synchronizing With Your Desktop Computer</i>	8
Description	9
<i>Front Panel View</i>	9
<i>Back Panel View</i>	10
<i>Left Edge View</i>	10
<i>Top Edge View</i>	11
Using Pocket PC 2002	12
<i>About the Today Screen</i>	12
<i>Using the Command Bar and the Navigation Bar</i>	12
<i>Using Pop-Up Menus</i>	13
<i>Entering Information</i>	14
Specifications	14
Where to Find More Information	14
End-User License Agreement	15

Learning About the Model 70

Congratulations on purchasing the Intermec Model 70 Pocket PC 2002 powered by Microsoft® Windows® CE. This device provides a convenient way to manage your business and personal information.

Read this guide before operating the Model 70.

Getting the Model 70 Up and Running

When you remove the Model 70 from its box, save the box and shipping material in case you need to ship or store it. Check the contents of the box against the invoice for completeness, and contact your local Intermec sales representative if there is a problem.

These items should be in the box with the Model 70:

- Rechargeable battery pack
- Cradle (RS-232)
- Case
- Microsoft Companion CD
- Pocket PC 2002 license, conformity statement, warranty card, and this *Model 70 Pocket PC 2002 Quick Start Guide*

You must order an AC adapter that is compatible with your country's wall plug style. All adapters accept 110 or 220 VAC.

Wall Plug Style	Part No.
North America	871-013-050
Europe	871-013-052
United Kingdom	871-013-051


For a list of other AC adapters and accessories that may be available, contact your local Intermec sales representative.

1 Charging the Batteries



Note: As soon as you remove the backup battery tape, connect the Model 70 to an external power source to keep the backup battery from draining.

1. Activate the backup battery by pulling out the backup battery tape. To locate the backup battery, see “Back Panel View” later in this guide.
2. Carefully, remove the main battery door. Use your thumbs to slide the door horizontally until it unlatches, and then lift the door up and away from the Model 70.

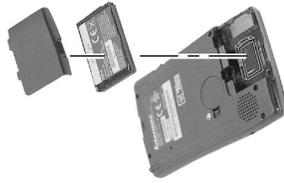

3. Insert the battery pack into the compartment. Make sure that the battery contacts are pointing toward the top edge of the Model 70 and the battery label is facing out so that you can read it.
4. Reinsert the main battery door and slide it horizontally toward the top edge until it clicks into place.
5. Plug the AC adapter into the Model 70 or plug it into the back of the cradle, and then connect it to a power outlet.



6. Dock the Model 70 in its cradle and charge for at least 30 minutes. You can use the Model 70 while the battery is charging.

2 Turning on Power

- Press the Power button.



3 Following the Setup Wizard

1. When the Welcome screen appears, press the Action button or tap the screen with your stylus. To locate the stylus, see “Top Edge View” later in this guide. This will initiate the Setup wizard.



2. If you did not do this in Step 1, pull the stylus out of its built-in compartment.
3. Follow the wizard’s onscreen instructions as it leads you through the rest of the setup process.



Note: If you do not use the Model 70 for several days, be sure to back up data and keep the Model 70 connected to an external power source. Otherwise, the batteries may drain completely, resulting in data loss.

4 Synchronizing With Your Desktop Computer

Using Microsoft ActiveSync, you can synchronize the data on the Model 70 with the data on your desktop computer. Synchronization compares the data on your device with the data on your desktop computer and updates both computers with the most recent information.

ActiveSync also lets you back up and restore data, install or delete programs, and copy files to and from your desktop computer. For help using ActiveSync, see the ActiveSync online help on your desktop computer.

To synchronize your information with your desktop computer

1. Use the cradle to establish a connection with your desktop computer.



- a. Connect the cradle to a serial port on your desktop computer.
 - b. Plug the AC adapter into the back of the cradle and connect to a power outlet.
 - c. Dock the Model 70 in the cradle.
2. Install ActiveSync on your desktop computer.
 - a. Insert the Microsoft Companion CD into your desktop computer.
 - b. Click the yellow arrow and then click Start Here.
 - c. Follow the onscreen instructions for installing it. When you are done, the Microsoft ActiveSync Get Connected dialog box appears.


3. Follow the onscreen instructions for establishing a partnership and performing your first synchronization.



Note: It is important to back up data to your desktop computer regularly. For help, see “Backup and Restore” in the ActiveSync online help on your desktop computer.

Description


This section describes the front panel, the back panel, the left edge, and the top edge of the Model 70.

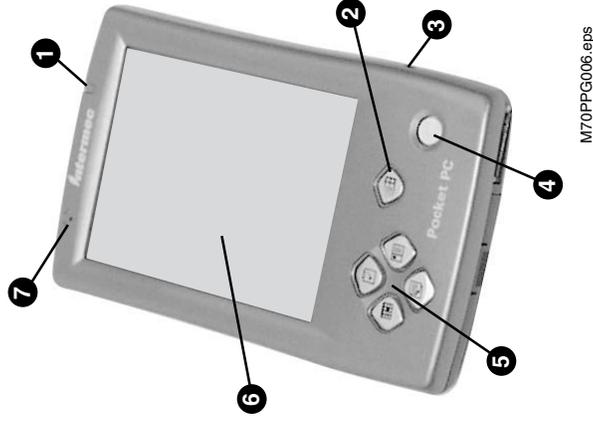

Front Panel View

- | | | |
|---|----------------------------|--|
| 1 | Notification Light | Provides visual alarm notification and indicates status of battery charge. |
| 2 | Windows Key | Press to maximize the Start menu. |
| 3 | AC Adapter Jack | Plug in the AC adapter to power the Model 70 or charge the batteries. |
| 4 | Power and Backlight Button | Turns the Model 70 on and off and turns the screen backlight on and off. |
| 5 | Program Buttons | Press to open associated programs. |
| 6 | Screen | Interprets stylus taps and displays information. |
| 7 | Microphone | Lets you create voice recordings. |

Back Panel View

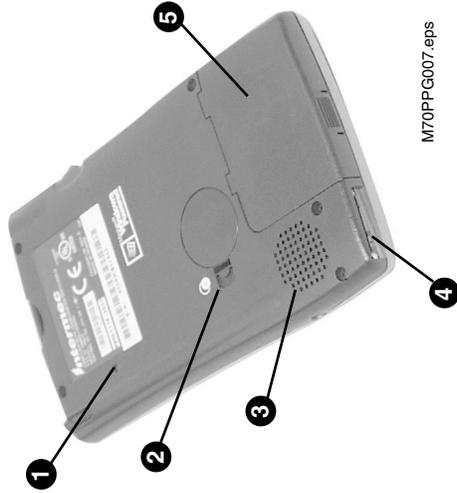

M70PPG007.eps

- 1** Reset Button
Press this button to restore the system after it freezes or experiences a malfunction.
- 2** Backup Battery Compartment
Contains the backup battery, which provides power when the main battery is drained or removed.
- 3** Speaker
Emits recording playbacks and produces sound alarms.
- 4** Communications Port
Establishes a connection with the desktop computer through the cradle.
- 5** Main Battery Compartment
Contains the main battery pack.

Left Edge View



M70PPG008.eps

Left Edge View (continued)

- 1** System Manager Button
Press to activate the System Manager menu.
- 2** Action Button/
Up/Down Control
Press to open an item (similar to pressing **Enter**).
Rotate to scroll through a list (similar to using arrow keys).
- 3** Record Button
Press and hold to record voice messages.

Top Edge View



M70PPG009.eps


- 1** Infrared Port
Lets you transfer data by infrared with other Windows devices.
- 2** Stylus
Use to enter information.
- 3** Compact Flash Card Slot
Holds compact flash expansion cards.
- 4** Headphone Jack
Accepts a headset connection.

Using Pocket PC 2002

To use Pocket PC 2002, you need to understand the Today screen, the command bar, the navigation bar, pop-up menus, and input methods (including the Character Recognizer).


About the Today Screen

When you turn on the Model 70 for the first time each day (or after four hours of inactivity), you will see the Today screen. You can also display this screen by tapping the Start menu or by pressing the Windows key, and then tapping Today. On the Today screen, you can see at a glance the information you need for the day.

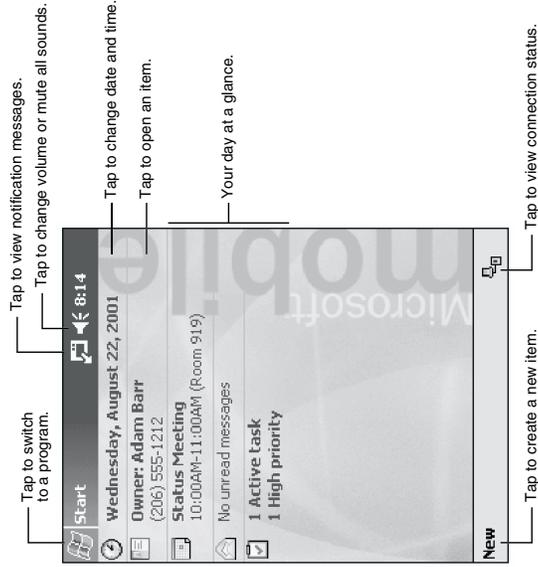


Using the Command Bar and the Navigation Bar

The command bar is displayed at the bottom of the screen. Use the menus and buttons to perform tasks in programs.

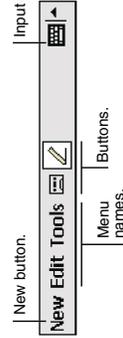


The navigation bar is located at the top of the screen. It displays the active program and current time and it lets you switch to programs and close screens.

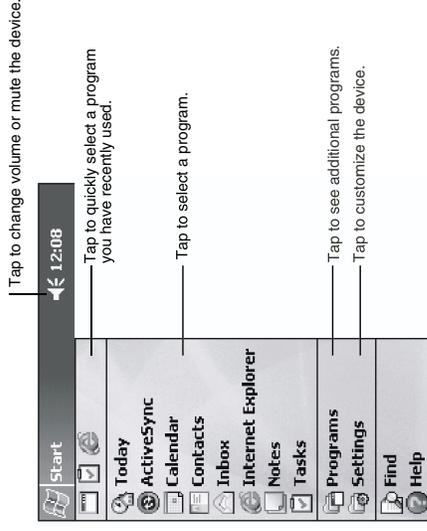

Using Pop-Up Menus

With pop-up menus, you can quickly choose an action for an item.

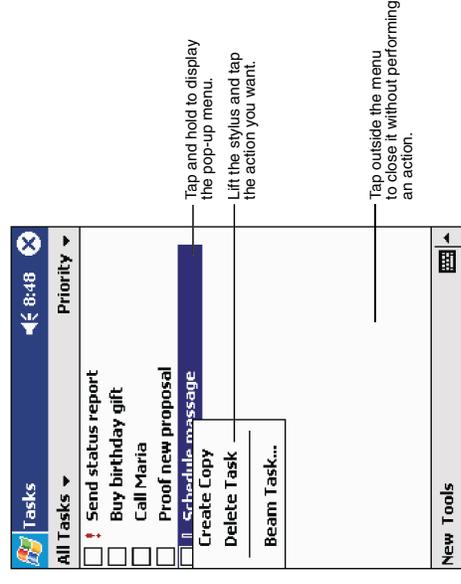

Entering Information

You can enter information in any Pocket PC 2002 program by typing with the soft keyboard or by writing and using the Character Recognizer.

The Character Recognizer input panel is divided into three writing areas. Letters written in the left area (labeled ABC) will create uppercase letters and letters written in the middle area (labeled abc) will create lowercase letters. The right area (labeled 123) is for writing numbers, symbols, special characters, and punctuation.

For more information on using Character Recognizer and for demonstrations of all characters, tap the question mark next to the writing area on the Character Recognizer input panel.

Specifications

Physical Dimensions

Width:	8.3 cm (3.3 in)
Length:	13.8 cm (5.4 in)
Height:	1.5 cm (0.6 in)
Weight:	151.5 g (5.3 oz)

Electrical Specifications

Electrical Rating: $\overline{\text{---}}$ 2A; 5 VDC

Temperature and Environmental Specifications

Operating Temperature:	0°C to 40°C	32°F to 104°F
Storage Temperature:	-25°C to 60°C	-13°F to 140°F
Relative Humidity:	0 to 95% non-condensing	

Where to Find More Information

For more information on using the Model 70 or Pocket PC 2002, please see

- the *Intermec Model 70 Pocket PC 2002 User's Guide* (Part No. 072721).
- the online help for Pocket PC 2002.
- the ActiveSync online help on your desktop computer.
- the Intermec Web site at www.intermec.com.
- the Microsoft Web site at www.microsoft.com/mobile/pocketpc.

End-User License Agreement

MICROSOFT WINDOWS FOR POCKET PC 2002

DATA EXCHANGE COMPONENT: MICROSOFT ACTIVESYNC, VERSION 3.5

IMPORTANT — READ CAREFULLY: You have acquired a device ("DEVICE") that includes software licensed by Intermec Technologies Corporation ("Manufacturer") from Microsoft Licensing Inc. or its affiliates ("MS"). Those installed software products of MS origin, as well as associated media, printed materials, and "online" or electronic documentation ("SOFTWARE") are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved.

IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT ("EULA"), DO NOT USE THE DEVICE OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT MANUFACTURER FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. **ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).**

GRANT OF SOFTWARE LICENSE.

SOFTWARE includes software already installed on the DEVICE ("DEVICE Software") and MS software contained on the CD-ROM disk ("Desktop Software"). This EULA grants you the following license:

- SYSTEM Software.** You may use the DEVICE Software as installed on the DEVICE.
- Desktop Software.** Desktop Software is included with your DEVICE, and you may install and use the Microsoft® ActiveSync® 3.5 component on one (1) or more computers to exchange information with one (1) or more computing devices that contain a compatible version of the Microsoft Pocket PC 2002 operating system. For other software component(s) contained in the Desktop Software, you may install and use such components only in accordance with the terms of the printed or online end-user license agreement(s) provided with such component(s). In the absence of an end-user license agreement for particular component(s) of the Desktop Software, you may install and use only one (1) copy of such component(s) on the DEVICE or a single computer with which you use the DEVICE.
- Back-up Copy.** If Manufacturer has not included a back-up copy of the DEVICE Software with the DEVICE, you may make a single back-up copy of the DEVICE Software. You may use the back-up copy solely for archival purposes.
- Microsoft® Outlook® 2002.** If Microsoft Outlook 2002 is included with your Device, the following terms apply to your use of Microsoft Outlook 2002: (i) regardless of the information contained in "Software Installation and Use" section of the online EULA you may install one (1) copy of the Microsoft Outlook 2002 on one (1) computer to use, exchange data, share data, access, and interact with the DEVICE, and (ii) the EULA for Microsoft Outlook 2002 is between Manufacturer (as defined above) and the end user – not between the PC Manufacturer and end user.

DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS.

- **Speech/Handwriting Recognition.** If the SOFTWARE includes speech and/or handwriting recognition component(s), you should understand that speech and handwriting recognition are inherently statistical processes; that recognition errors are inherent in the processes; that it is your responsibility to provide for handling such errors and to monitor the recognition processes and correct any errors. Neither Manufacturer nor its suppliers shall be liable for any damages arising out of errors in the speech and handwriting recognition processes.
- **Limitations on Reverse Engineering, Decompilation, and Disassembly.** You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.
- **Single DEVICE.** The DEVICE Software is licensed with the DEVICE as a single integrated product. The DEVICE Software installed in read-only memory ("ROM") of the DEVICE may only be used as part of the DEVICE.
- **Single EULA.** The package for the DEVICE may contain multiple versions of this EULA, such as multiple translations and/or multiple media versions (e.g., in the user documentation and in the software). Even if you receive multiple versions of the EULA, you are licensed to use only one (1) copy of the DEVICE Software.
- **Rental.** You may not rent or lease the SOFTWARE.
- **Software Transfer.** You may permanently transfer all of your rights under this EULA only as part of a sale or transfer of the DEVICE, provided you retain no copies, you transfer all of the SOFTWARE (including all component parts, the media and printed materials, any upgrades or backup copies, this EULA and, if applicable, the Certificate(s) of Authenticity), and the recipient agrees to the terms of this EULA. If the SOFTWARE is an upgrade, any transfer must include all prior versions of the SOFTWARE.
- **Termination.** Without prejudice to any other rights, Manufacturer or MS may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.

UPGRADES AND RECOVERY MEDIA.

- **DEVICE Software.** If the DEVICE Software is provided by Manufacturer separate from the DEVICE on media such as a ROM chip, CD-ROM disc(s) or via web download or other means, and is labeled "For Upgrade Purposes Only" or "For Recovery Purposes Only", you may install one copy of such DEVICE Software onto the DEVICE as a replacement copy for the existing DEVICE Software and use it in accordance with Section 1 of this EULA.
- **Desktop Software.** If any Desktop Software component(s) is provided by Manufacturer separate from the DEVICE on CD-ROM disc(s) or via web download or other means, and labeled "For Upgrade Purposes Only" or "For Recovery Purposes Only", you may (i) install and use one copy of such component(s) on the computer(s) you use to exchange data with the DEVICE as a replacement copy for the existing Desktop Software component(s).

COPYRIGHT. All title and intellectual property rights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text, and "applets", incorporated in the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by MS or its suppliers (including Microsoft Corporation). You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants you no rights to use such content. All rights not specifically granted under this EULA are reserved by MS and its suppliers (including Microsoft Corporation).

EXPORT RESTRICTIONS. You agree that you will not export or re-export the SOFTWARE to any country, person, or entity subject to U.S. export restrictions. You specifically agree not to export or re-export the SOFTWARE: (i) to any country to which the U.S. has embargoed or restricted the export of goods or services, which as of May 1999 include, but are not necessarily limited to, Cuba, Iran, Iraq, Libya, North Korea, Sudan, Syria, and the Federal Republic of Yugoslavia (including Serbia, but not Montenegro), or to any national of any such country, wherever located, who intends to transmit or transport the products back to such country; (ii) to any person or entity who you know or have reason to know will utilize the SOFTWARE or portion thereof in the design, development, or production of nuclear, chemical, or biological weapons; or (iii) to any person or entity who has been prohibited from participating in U.S. export transactions by any federal agency of the U.S. government.

NOTE ON JAVA SUPPORT. The SOFTWARE may contain support for programs written in Java. Java technology is not fault tolerant and is not designed, manufactured, or intended for use or resale on-line control equipment in hazardous environments requiring fail-safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines, or weapons systems, in which the failure of Java technology could lead directly to death, personal injury, or severe physical or environmental damage.

PRODUCT SUPPORT. Product support for the SOFTWARE is not provided by MS, its parent corporation, Microsoft Corporation, or their affiliates or subsidiaries. For product support, please refer to Manufacturer's support number provided in the documentation for the DEVICE. Should you have any questions concerning this EULA, or if you desire to contact Manufacturer for any other reason, please refer to the address provided in the documentation for the DEVICE.

NO LIABILITY FOR CERTAIN DAMAGES. EXCEPT AS PROHIBITED BY LAW, MS SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

FOR APPLICABLE LIMITED WARRANTIES AND SPECIAL PROVISIONS PERTAINING TO YOUR PARTICULAR JURISDICTION, PLEASE REFER TO YOUR WARRANTY BOOKLET INCLUDED WITH THIS PACKAGE OR PROVIDED WITH THE SOFTWARE PRINTED MATERIALS.



Corporate Headquarters
6001 36th Avenue West
Everett, Washington 98203

tel 425.348.2600

fax 425.355.9551

www.intermec.com

Model 70 Pocket PC 2002 Quick Start Guide



072704-001