

# Intermec Gateway License Instructions

Before you can use the Intermec Gateway with your devices, you need to install the Intermec Gateway licenses on the Intermec Application Server.

You need to follow these installation instructions:

- when you install licenses for the first time.
- when you install additional licenses. This installation process adds the new licenses to the original licenses in the license file.

To order licenses, contact your Intermec sales representative.

## To install Intermec Gateway licenses on an Intermec Application Server

- 1 Enter the IP address or name of the Intermec Application Server in the **Address** field of your web browser to open the Intermec Application Server home page. Make sure the home page contains a link for the Intermec Gateway, which indicates that the Intermec Gateway is installed on the server.



**Note:** If the Intermec Gateway is not installed on the server, contact Intermec Technical Support.


- 2 Insert the Intermec Gateway license disk into the disk drive on the Intermec Application Server.
- 3 If you are working locally (from a keyboard and monitor attached to the Intermec Application Server), continue with Step 4.

If you are not working locally, you need to establish a remote connection to the Intermec Application Server. Follow these steps:

- a From the Intermec Application Server home page, click **Configuration**. The Microsoft® Windows® Remote Desktop Web Connection window appears.
  - b Enter the IP address or name of the Intermec Application Server in the **Server** field.
  - c Click **Connect**. The Intermec Application Server desktop appears.
  - d If prompted to log in, enter `administrator` in the **User Name** field and `intermec` (in lowercase) in the **Password** field. Click **OK**.
- 4 From the **Start** menu, choose **Run**. The Run dialog box appears.



- 5 Enter `a:install` in the **Open** field, where *a* is the disk drive.
- 6 Click **OK**. The Install dialog box appears. The text specifies the number of licenses you ordered.

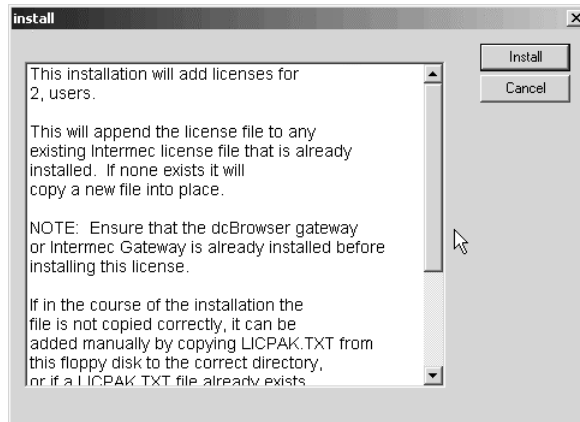

- 7 Read the text and then click **Install**. A dialog box appears.



- 8 Click **OK**.
- 9 From the **Start** menu, choose **Shut Down**. The Shut Down Windows dialog box appears.
- 10 Choose **Restart** from the **What do you want the computer to do?** list.
- 11 In the **Comment** text box, enter `Installed Intermec Gateway licenses` or something similar. This comment will appear in the NT event log.



**Note:** You cannot click **OK** until you enter something in the **Comment** text box.

- 12 Click **OK**. The Intermec Application Server reboots.

**Intermec**

6001 36th Avenue West  
Everett, Washington 98203  
U.S.A.

tel 425.348.2600

fax 425.355.9551

www.intermec.com

© 2005 Intermec Technologies  
Corporation. All rights reserved.

Intermec Gateway License Instructions



P/N 072960-002