


To remove the CK30 from the swiveling belt holder


- 1 Turn the CK30 so that it is at a 90-degree angle to the belt holder.
- 2 While pressing down on the release button, slide the belt holder attachment up and out of the groove.

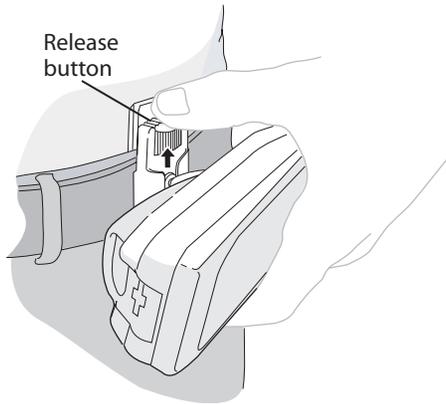

AL3 Swiveling Belt Holder Instructions

The AL3 swiveling belt holder provides you with an easy way to secure the CK30 Handheld Computer when you are not using it.

These instructions describe how to install and use the swiveling belt holder. Before using the swiveling belt holder, please read these instructions and save them for future reference.

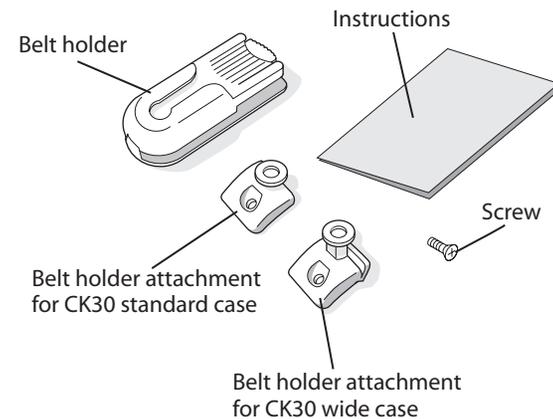

Shipping package contents: This illustration shows the contents of the AL3 swiveling belt holder kit. Note the difference between the belt holder attachments for the CK30 standard case and the CK30 wide case.

If your CK30 has a handstrap or handle, you need to remove it before you install the swiveling belt holder. For help, see the instructions that shipped with your handle or handstrap.



Note: The swiveling belt holder is not compatible on a CK30 with a 50-key keypad, because you need to use the trigger on the handle to scan bar code labels.

To install the swiveling belt holder, you also need this tool:

- #2 Phillips screwdriver



Technologies Corporation

6001 36th Avenue West

Everett, WA 98203

U.S.A.

www.intermec.com

© 2003 Intermec Technologies Corp.

All Rights Reserved


AL3 Swiveling Belt Holder Instructions



P/N 073509-001

Installing the Belt Holder Attachment

The CK30 has either a wide case or a standard case, depending on the type of internal scanner that is installed. Before installing the swiveling belt holder, you need to identify which case you have.

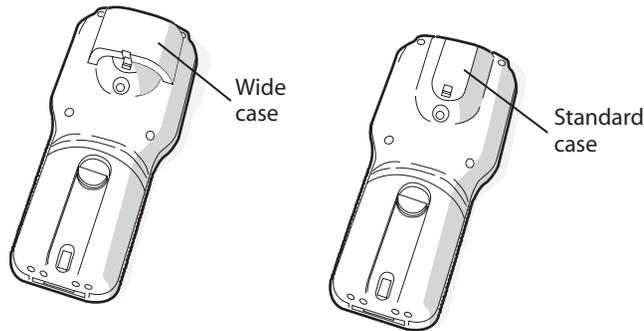


CK30 case: This illustration shows the difference between the CK30 wide case and the CK30 standard case.

To install the belt holder attachment on the CK30

- 1 Remove the screw from the back case of the CK30.
- 2 Use the previous illustration to identify which back case you have, and then refer to the Shipping package contents illustration on the first page to determine which belt holder attachment you need.
- 3 Secure the appropriate belt holder attachment to the CK30 using the screw that shipped with the swiveling belt holder kit.

If you have a torque driver, tighten the screw to 0.9 Nm (8 in-lb).

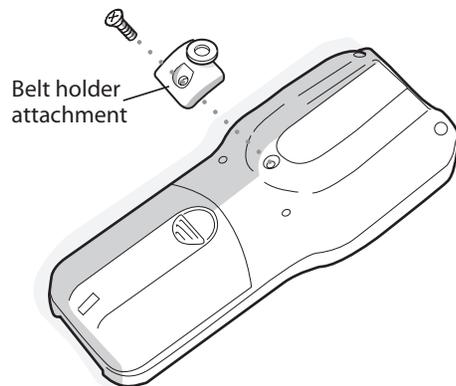


Using the Belt Holder


You can easily attach the belt holder to your belt and insert and remove the CK30.

To use the belt holder

- 1 Pinch the top of the belt holder, slide it over your belt, and release the belt holder. Make sure that the belt holder groove is facing outward.

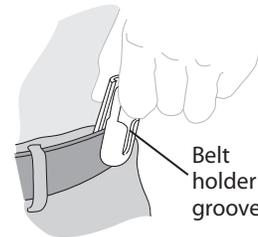

- 2 Hold the CK30 at a 90-degree angle to the belt holder and slide the belt holder attachment into the groove until it clicks into place.

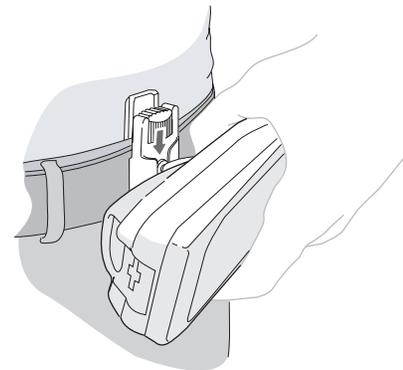

When you let go of the CK30, the weight of the computer causes it to naturally orient itself so that it hangs vertically with the screen at the top.

The CK30 is now securely attached to the belt holder.