

## Getting Started

After you remove your Intermec mobile device from the box, charge the battery pack, and read through this Quick Start Guide, you are ready to become familiar with Microsoft® Windows Mobile® 5.0 software for Pocket PC. This guide prompts you through the first few displays to enable you to become comfortable with the screens, options, and operation. A complete list of documentation available for your product is listed in the **For More Information** table on the back page of this guide.

**Note:** Some features and options documented in this guide may not apply to your mobile device. Please refer to your product User's Manual for details regarding features and options offered on your mobile device.


**Note:** Screens shown in this guide represent typical displays on devices configured with factory defaults. If your device has been custom-configured, then screens shown in this guide may differ.




## Microsoft Windows Mobile 5.0

## Introducing Windows Mobile 5.0

Turning on your Intermec mobile device the first time brings up the **Today** screen. Tap the **Start** icon to access programs and settings.

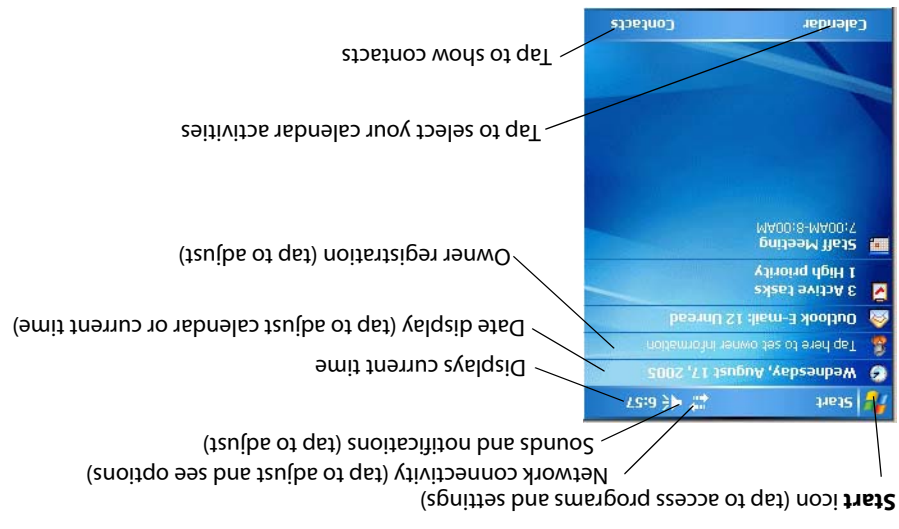

The buttons below the display activate the on-screen soft keys. Soft keys are the default set by individual applications. The key on the left side corresponds to the left option and the key on the right corresponds to the right option in any particular screen. These keys assist in operating the device without using a stylus.

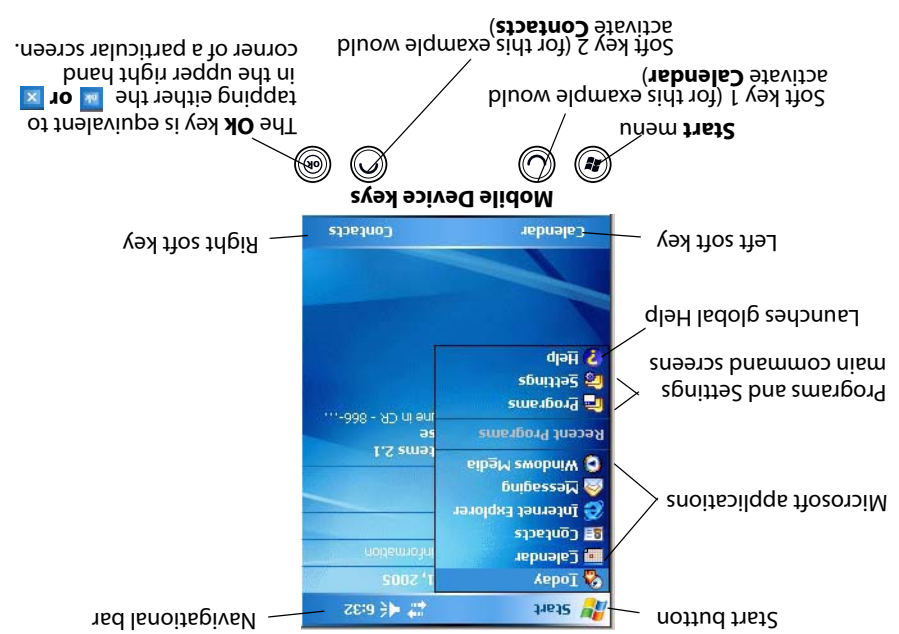

To open a program shown on your **Today** screen, tap the button. You can switch from one program to another by selecting it from the **Start** menu.

## Adding Applications

You can add applications to your mobile device several ways, refer to your product User's Manual for complete details. They include:

- ActiveSync. Installing this software that enables you to establish a partnership with your desktop pc for downloading applications and synchronizing data. **Note:** ActiveSync 4.x is required for Microsoft Windows Mobile 5.0.
- Directly to the device. Download the program to your mobile device using Pocket Internet Explorer. Alternatively copy the application to your device using an SD card or ActiveSync file transfer.
- Adding the program to the Start menu. Tap **Start > Settings > Personal** tab > **Menus** button, then check the box for the program. If you do not see the program listed, you can either use File Explorer on your mobile device or use ActiveSync on the desktop to create a shortcut to the program and place the shortcut in the Start menu folder. Refer to your product User's Manual for complete details.


## For More Information

Additional information is available from the following sources:

Document Available:	on Web	in Print
<i>CK60 Handheld Computer with Window Mobile 5.0 User's Manual (pn: 935-000-001)</i>	X	X
<i>CN30 Mobile Computer User's Manual (pn: 961-054-039)</i>	X	X
<i>Intermec Computer Command Reference Manual (pn: 073529)</i>	X	X
<i>Intermec Developer Library (includes SDK)</i>	X	

Go to the Intermec web site at [www.intermec.com](http://www.intermec.com) to find the manuals in PDF format. If you experience any problems, visit our Product Support Knowledge Central web site [intermec.custhelp.com](http://intermec.custhelp.com) to search for product specific information. To order accessories and printed documentation, contact your Intermec sales representative.

**Intermec**  
 Corporate Headquarters  
 6001 36th Avenue West  
 Everett, Washington 98203  
 U.S.A.  
 tel 425.348.2600  
 fax 425.355.9551  
[www.intermec.com](http://www.intermec.com)

Microsoft Windows Mobile Quick Start Guide  
  
 P/N 930-067-001

