



CK31 Protective Case Instructions

The CK31 protective case keeps your CK31 Handheld Computer clean and dry. The case has a clear vinyl covering so that you can use the keypad while the CK31 is in the protective case. You can use your existing handstrap after you insert the CK31 into the protective case. You can also attach the included shoulder strap or a tethered stylus (purchased separately).


If your CK31 has a handstrap attached, you need to detach it from the battery before you insert the CK31 into the protective case.




Note: There are two versions of the CK31 protective case: one for the large back (P/N 825-168-001) and one for the standard back (P/N 075506). The illustrations in this document show the large back protective case.

To place the CK31 in the protective case


- 1 Unsnap the back of the case.
- 2 Insert the CK31 into the protective case. The protective case is designed to fit the product snugly, so you may need to use a little force to insert the CK31.

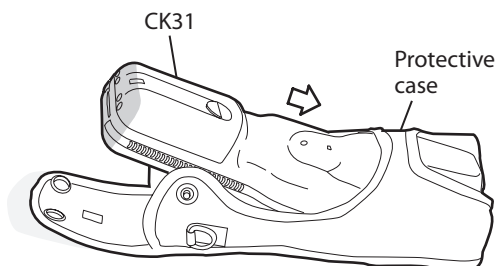

- 3 Secure the two snaps around the base of the CK31.
- 4 (Optional) Attach the handstrap by inserting it through the protective case and into the battery.
- 5 (Optional) If you have a tethered stylus, you can attach it to the tab on the right side of the protective case and insert it into the sleeve for storage.

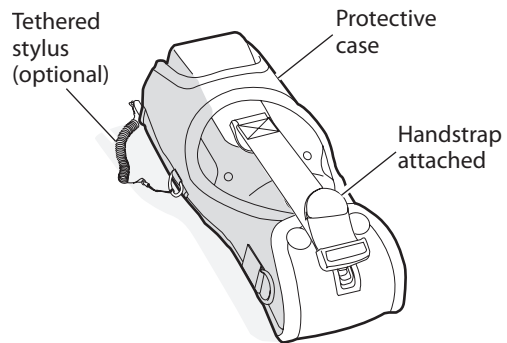

- 6 (Optional) Attach the shoulder strap and adjust it to the desired length.

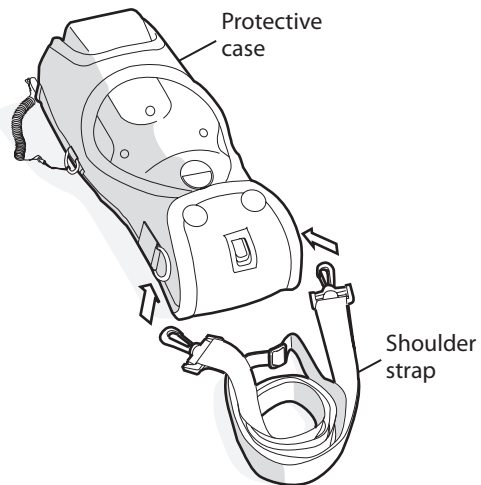

Intermec

6001 36th Avenue West
Everett, Washington 98203
U.S.A.

tel 425.348.2600

fax 425.355.9551

www.intermec.com

© 2005 Intermec Technologies
Corporation. All rights reserved.

CK31 Protective Case Instructions



P/N 943-032-001 Rev A