


CK30 and CK31 Handle

- To clean the handle**
- 1 Remove the handle screw and take the handle off the CK30 or CK31. Use a damp cloth to clean the bottom surface of the computer and the mounting surface on the handle.
 - 2 Press and hold the trigger to expose the magnet. Use adhesive tape to remove any metal shavings from the magnet surface.
 - 3

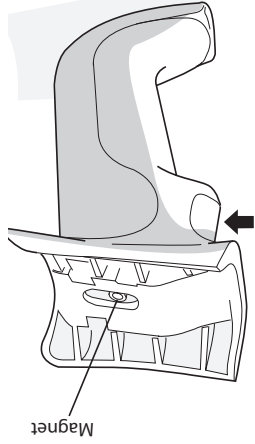

CK30 and CK31 Handle Instructions



P/N 943-079-001


Intermec
Worldwide Headquarters
6001 36th Avenue West
Everett, Washington 98203
U.S.A.
tel 425.348.2600
fax 425.355.9551
www.intermec.com
© 2006 Intermec Technologies Corporation. All rights reserved.

Installing the Handle

Use these instructions to install the handle on a CK30 or CK31 Handheld Computer.

To install the handle

- 1 (CK31 only) Remove the adhesive backing from the spacer.
- 2 (CK31 only) Insert the spacer on the CK31 handle and press to make sure it is securely attached.

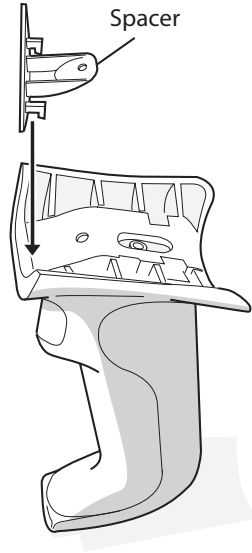

Installing the Handle (continued)

- 3 Place the handle on the computer.
- 4 Tighten the screw so the handle does not move. If you have a torque screwdriver, tighten the screw to 1.26 Nm (12 in-lb) maximum.



Caution

Do not overtighten the handle screw. You may damage the threads or cause the trigger mechanism to jam.

