

PR₂ | PR₃

Belt Loop Instructions

皮帶環說明

皮帶環說明

Instructions pour la boucle de ceinture

Anleitung zur Gürtelschleife

Istruzioni per l'anello da cintura


벨트 루프 지침





Instruções para a Alça de Cinto

Инструкции к петле для ремня

Instrucciones del bucle para cinturón

Kemer Köprüsü Talimatları

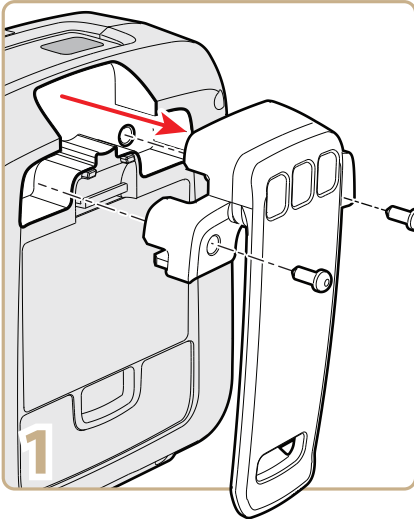

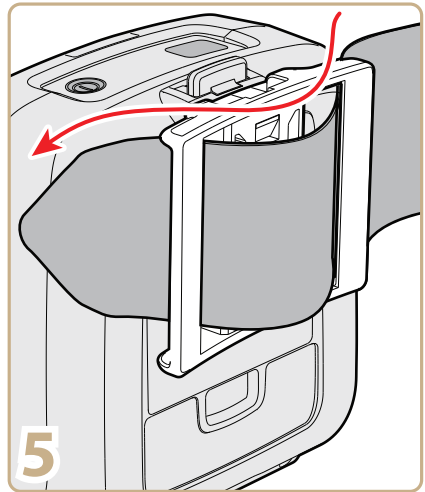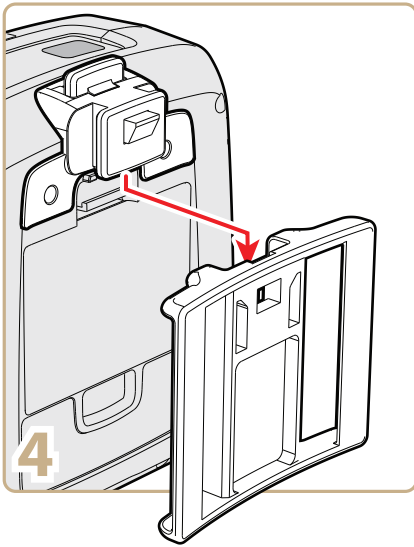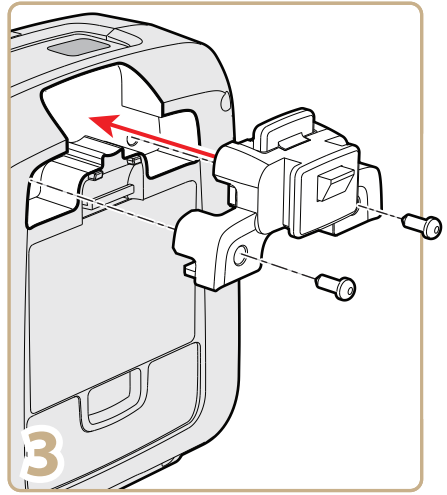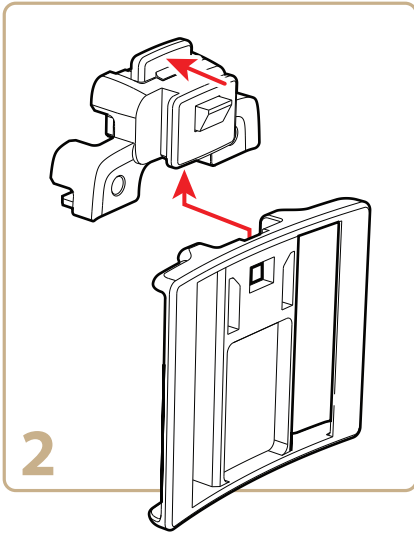

PR2 and PR3 Belt Loop Instructions



P/N 943-341-001

Intermec

Worldwide Headquarters
6001 36th Avenue West
Everett, Washington 98203
U.S.A.

tel 425.348.2600

fax 425.355.9551

www.intermec.com

© 2012 Intermec Technologies Corporation. All rights reserved.

