



**Installation
Instructions**

**Installing 802.11b
Radio Card in the
PB41 Printer**

Packing List

Check to ensure that you receive these items:

- Intermec® PB41A27040 or PB41A27042 (4-inch thermal belt) Printer with 802.11b radio
- 802.11b Radio Card (taped to the inside of the printer box)

Introduction

Your PB41 Printer with an 802.11b radio has been configured at the factory. FCC mandates that the radio card not be installed for shipment. The following information guides you through the process of installing the radio card.

The radio card is packed separately in a static plastic bag taped to the inside of the printer box.

Installing 802.11b Radio Card



Before installing the 802.11b Radio Card ensure that the protective battery tab strips are in place or remove the batteries before installing the radio card in your PB41 Printer.


- 1 Remove the radio card cap.



- 2 With the logo facing down, insert the radio card between the foam and the radio card strap.



- 3 Carefully push the card into the connector until it is fully seated.

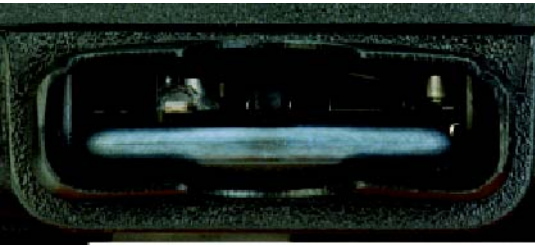

- 4 Replace the radio card cap.
- 5 Install the battery packs.



Corporate Headquarters
6001 36th Avenue West
Everett, Washington 98203
U.S.A.

tel 425.348.2600

fax 425.355.9551
www.intermec.com

© 2004 by Intermec Technologies Corporation. All rights reserved.
Installing 802.11b Radio in PB41 Printer Instructions February 2004



PN: 962000038A