

Quick Start Guide

**PB41
Battery Eliminator**

PB41 Battery Eliminator


The PB41 Battery Eliminator (p/n: 851-074-001) was designed exclusively for the PB41 Printer. This device removes the need to have the battery packs in your printer. The Battery Eliminator allows the PB41 to accept power from either an AC or DC source.

A typical installation would have the PB41 Printer mounted in a vehicle and the Battery Eliminator receiving power from the vehicle battery.

In scenarios where portability is not required, the Battery Eliminator saves you from purchasing printer batteries. The Battery Eliminator removes temperature concerns when charging or using your printer with battery packs.

Installing the Battery Eliminator

- 1 Remove the battery packs from your printer.
- 2 Install the Battery Eliminator into one of the battery pack slots.
- 3 Connect the Battery Eliminator cable to the In-line Adapter cable (p/n: 852-052-102).
- 4 Connect the In-line Adapter to the Truck Power Cable (p/n: 206-875-xxx). The Truck Power Cable installs to your vehicle battery and is routed into the cab of your vehicle.

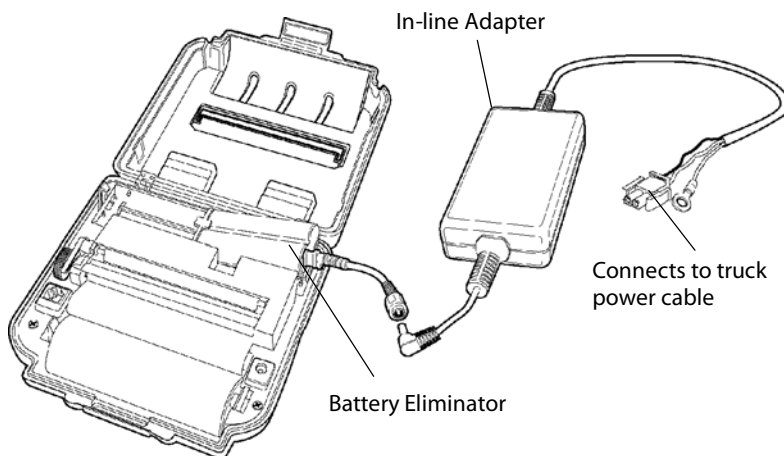

Global Services and Support

Warranty Information

To understand the warranty for your Intermec product, visit the Intermec web site at <http://www.intermec.com> and click **Service & Support**. The Intermec Global Sales & Service page appears. From the **Service & Support** menu, move your pointer over **Support**, and then click **Warranty**.

Telephone Support

These services are available from Intermec Technologies Corporation.

Service	Description	In the U.S.A. and Canada call 1-800-755-5505 and choose this option
Factory Repair and On-site Repair	Request a return authorization number for authorized service center repair, or request an on-site repair technician.	1
Technical Support	Get technical support on your Intermec product.	2
Service Contract Status	Inquire about an existing contract, renew a contract, or ask invoicing questions.	3
Schedule Site Surveys or Installations	Schedule a site survey, or request a product or system installation.	4
Ordering Products	Talk to sales administration, place an order, or check the status of your order.	5

Outside the U.S.A. and Canada, contact your local Intermec representative. To search for your local representative, from the Intermec web site, click **Contact**.



Corporate Headquarters
6001 36th Avenue West
Everett, Washington 98203
U.S.A.

tel 425.348.2600

fax 425.355.9551
www.intermec.com

© 2004 by Intermec Technologies Corporation. All rights reserved.
PB41 Battery Eliminator Quick Start Guide April 2004



PN: 96200042A