

Model 6640 QUICK-START Instructions


You must charge the main battery and make all connections to the computer prior to first-time use. These instructions include battery installation and connector locations. See the Model 6640 User's Guide, P/N 961-054-018 for detailed instructions.

Battery Installation

1. Open the battery compartment door by pressing the latch tab and pulling outward on it.
2. Align the battery pack to the opening with connectors facing into the computer and the pull ring oriented as shown in the illustration below.
3. Slide the battery pack into the computer.
4. Press firmly INWARD and slightly down on the battery pack to secure it in place.
5. Reinstall the battery compartment door.
6. Close battery door until latch tab "clicks" into place.

▼ **CAUTION:** Fully charge the main battery before using the computer away from an external power source.

▼ **CAUTION:** Close and secure compartment doors before using computer.

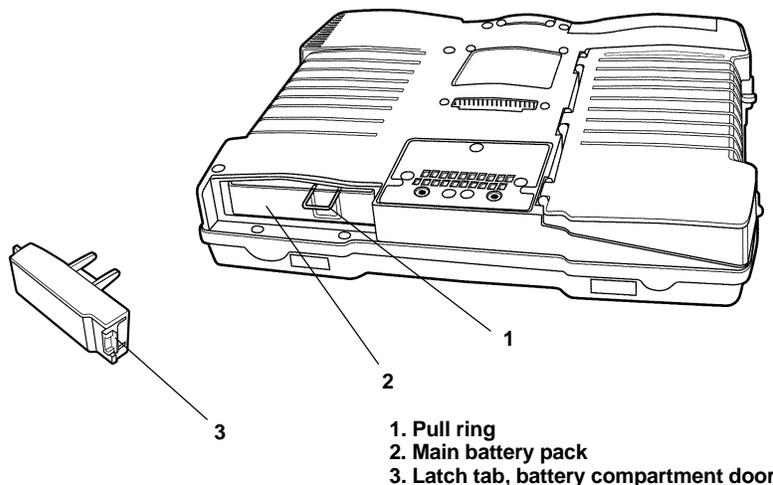




Connectors

A variety of I/O connectors is available for the inset area shown below. Those found on your computer may vary from this illustration. The docking connector is located on the back of the computer. Make all connections before powering the unit ON. The USB connector *does* permit “hot swap” connections.


The On/Off switch is a true power switch and will reset the computer if a lockup occurs. Always perform a proper Windows shutdown before powering the unit OFF.

You can press the Suspend/Resume switch for a *full one-second* to reduce power consumption during idle periods. This will keep the application program live and ready to Resume the next time you press the Suspend/Resume switch for one full second.

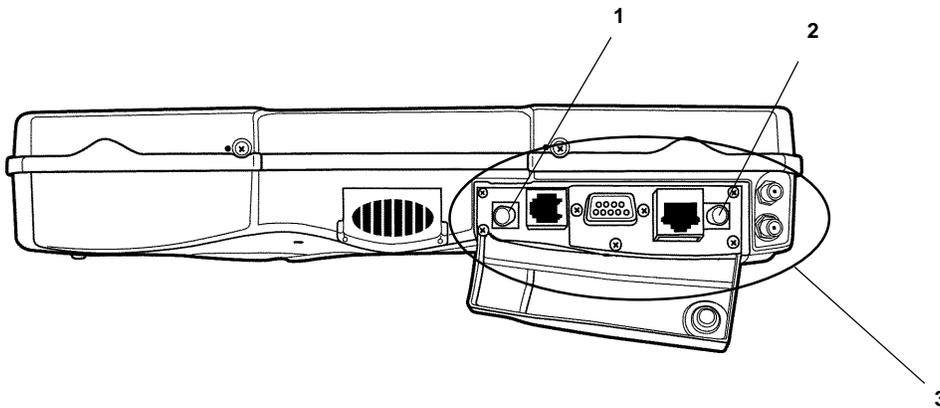

Top View

1. Power On/Off switch
2. Suspend/Resume switch
3. Variety of connectors available.

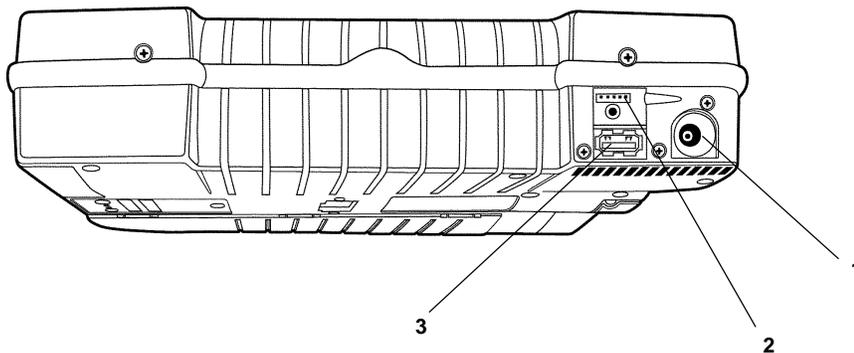

(right) Side View

1. DC Input connector
2. Pen connector
3. USB connector