Specifications

Environmental

Operating Temperature:: -20°C to +50°C (-4°F to +122°F)
Storage temperature: -30°C to 70°C (-22°F to +158°F)
Relative Humidity: 5% to 95%

USB-A Host Connector Pinouts

Pin Number	Signal Name	I/O to Computer	Description
1	VBUS	PWR	PWR_OUT To power USB peripherals
2	USBH_D-	I/O	USB Host data negative
3	USBH_D+	I/O	USB Host data positive
4	GND	PWR	Signal Ground
USB-A Shell	C-GND	PWR	Chassis Ground

USB-B Client Connector Pinouts

Pin Number	Signal Name	I/O to Computer	Description
1	VBUS	PWR	USBC_5V_DET
2	USBC_D-	I/O	USB Client data negative
3	USBC_D+	I/O	USB Client data positive
4	GND	PWR	Signal Ground
USB-B Shell	C-GND	PWR	Chassis Ground

CK60 USB Snap-On Adapter (AA6) Instructions

P/N 962-032-013C

Intermec

Worldwide Headquarters
6001 36th Avenue West
Everett, Washington 98203
U.S.A.

tel 425.348.2600
fax 425.355.9551
www.intermec.com

© 2010 Intermec Technologies Corporation. All rights reserved.

Intermec

Instructions

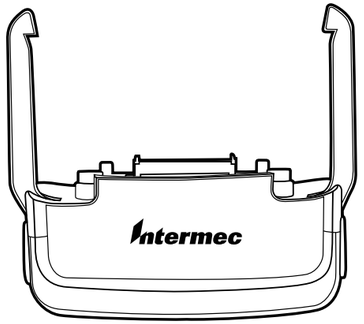

CK60 USB Snap-On Adapter (AA6)

Out of the Box

After you remove the CK60 Handheld Computer Snap-On USB Adapter (Model AA6) from the shipping box, save the box and packing material in case you need to ship or store the USB Adapter. The USB adapter shipping box should contain these items:

- CK60 handheld computer snap-on USB adapter
- CK60 USB adapter instructions
- Compliance insert

The USB snap-on adapter allows quick and easy attachment of standard USB cables to the CK60 handheld computer. Two metal guides ensure proper alignment of the adapter to the handheld computer; spring clips hold the adapter securely in place.

The USB adapter allows for the use of either a Series A Host connection and/or a Series B Client connection.

A power connector on the USB adapter allows connection of an external power supply to the CK60 without removing the adapter.

Output power (500 mA @ 5V) on the USB Host connector to power USB peripherals.

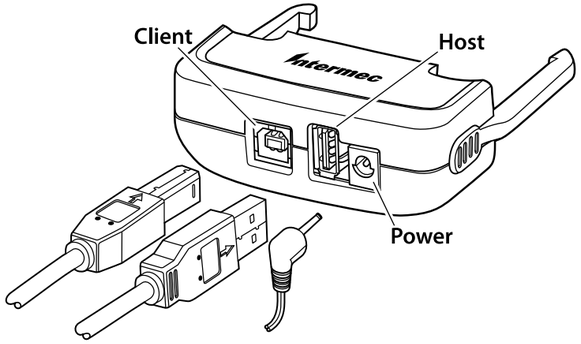

You must remove the USB adapter from the CK60 before you can insert the handheld computer into a dock.

To attach the USB adapter:

- Align metal clips with guides on either side of the CK60 and press firmly. The adapter will latch into place.

To remove the USB adapter:

- Squeeze the finger grips on both sides of the USB adapter to disengage clips and pull the USB adapter away from the handheld computer.
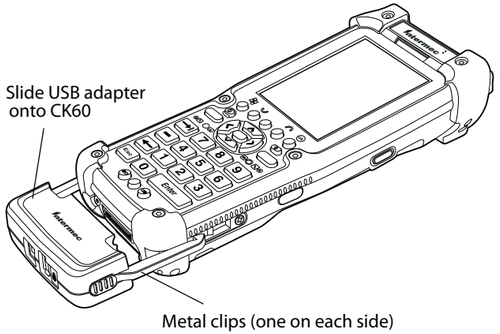
CK60 USB Adapter Features