

MobileLAN access WA21/2100 Insulated Bag Instruction Sheet

This instruction sheet explains how to install the insulated bag (P/N 068216) on the MobileLAN™ access WA21 or the MobileLAN™ access 2100. Note these important points about using the insulated bag:

- The insulated bag is intended to be used with the internal heater option on an access point that operates in an environment that maintains a constant cold temperature between -30°C and 0°C (-22°F and 32°F).



Note: Remove the insulated bag when temperatures exceed the specified cold temperature range.

- The insulated bag should not be used if you are powering the WA21 or 2100 with the power over Ethernet option.
- For the heater to function properly, you must use the mounting bracket kit (P/N 067444) to vertically mount the access point, with the antenna pointing up.

Your kit contains these parts:


- Insulated bag
- Shoulder bolts (4)

To install the insulated bag

- 1** If you are using an antenna, firmly screw the antenna onto the antenna connector on the access point.

If you are using an antenna cable, you need to insert the cable through the antenna opening in the insulated bag and out the other end of the bag, and then firmly screw the antenna cable onto the antenna connector on the access point.

- 2** Remove the four rubber feet from the bottom of the access point.
- 3** Use a straight-slot screwdriver to unscrew the thumbscrews that secure the cable access door to the access point, and then remove the cable access door.
- 4** Open all hook and loop closures on the insulated bag.
- 5** Slowly slide the access point into the insulated bag. Refer to the next illustration.
 - Make sure the bottom of the access point is facing up.
 - Make sure the four round holes in the insulated bag are facing up.
 - Make sure the antenna or antenna cable slides out through the antenna opening.

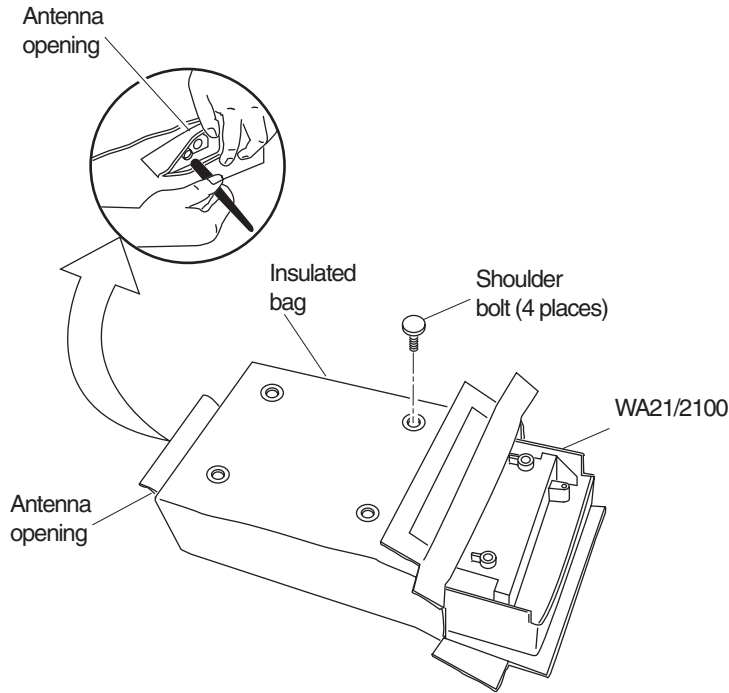

2100I001.eps

- 6 Press the hook and loop closures together around the antenna.
- 7 Attach the power and other cables to the access point according to the instructions in the *MobileLAN access System Manual* (P/N 067150).
- 8 Reattach the cable access door and tighten the thumbscrews using a straight-slot screwdriver.
- 9 Fold in the top and bottom flap. Press the hook and loop closures together around the cables.
- 10 Press the small hook and loop flaps down securely against the sides of the bag.
- 11 Insert one shoulder bolt through a hole in the insulated bag and into one of the holes in the access point that you uncovered by removing the rubber feet in Step 2. Tighten the bolt until it is pressed firmly into the access point chassis. Repeat for the remaining shoulder bolts.

You have finished installing the insulated bag and are ready to mount the access point. Refer to the *MobileLAN access WA21/2100 Mounting Bracket Instruction Sheet* (P/N 067366) for mounting instructions. Refer to the *MobileLAN access System Manual* for information about using your access point.

MobileLAN access WA21/2100 Insulated Bag Instruction Sheet



068116-002

Intermec

Technologies Corporation
6001 36th Avenue West
Everett, WA 98203
U.S.A.

www.intermec.com

© 2002 Intermec Technologies Corp.
All Rights Reserved