


MobileLAN access WA22/2101 Cubicle Bracket Instruction Sheet

This instruction sheet explains how to mount the MobileLAN™ access WA22 or the MobileLAN™ access 2101 on a cubicle wall using this cubicle bracket kit (P/N 069926) with the mounting bracket that shipped with the access point. Note these important points:

- The cubicle bracket fits cubicle walls that are 4.6 to 9.1 cm (1.8 to 3.6 in) thick.
- These instructions assume that you have inserted the shoulder screws that ship with the mounting bracket into the brass inserts on the back of the access point. For instructions on how to insert the shoulder screws, see the quick start guide that shipped with your access point.

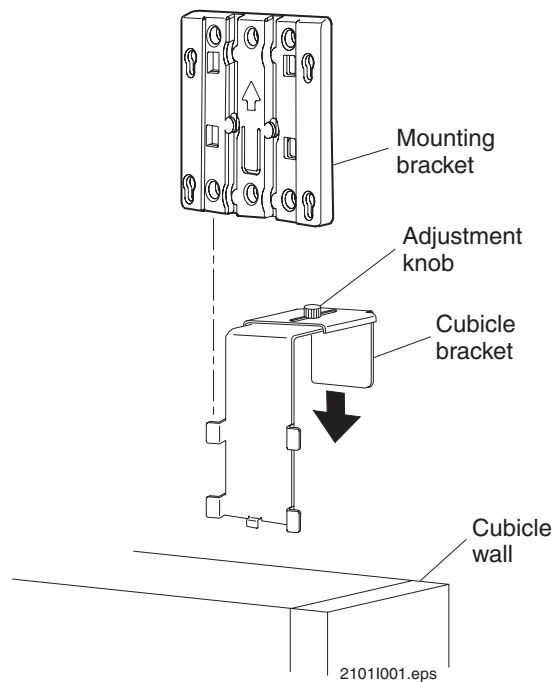

To mount the access point using the cubicle bracket

- 1** Place the cubicle bracket over the top of the cubicle wall.
- 2** Tighten the adjustment knob on the cubicle bracket so the bracket is securely positioned on the cubicle wall.
- 3** Position the mounting bracket with the arrow pointing up, as shown in the illustration.
- 4** Slide the mounting bracket down the cubicle bracket until it is firmly seated.
- 5** Insert the shoulder screws on the access point into the keyhole slots in the mounting bracket.
- 6** Slide the access point down until it is firmly seated in the mounting bracket.



Technologies Corporation
6001 36th Avenue West
Everett, WA 98203
U.S.A.

www.intermec.com

© 2002 Intermec Technologies Corp.
All Rights Reserved

MobileLAN access WA22/2101 Cubicle Bracket Instruction Sheet



069962-002