


MobileLAN access 2101 Antenna Bracket Instruction Sheet

This instruction sheet describes how to provide support for external antennas using the antenna bracket (P/N 069888). The antenna bracket kit includes the antenna bracket, washer, and nut. You need to supply

- Two #6 or M3.5 wood or sheet metal screws, depending upon the mounting surface.
- Antenna adapter cable.

Note these important points:

- Mount the MobileLAN™ access 2101 to a wall using the mounting bracket that ships with the access point. For instructions on how to install the mounting bracket, see the *MobileLAN access 2101 Quick Start Guide* (P/N 069960).
- Mount the antenna bracket within 10 cm (4 in) of the access point.

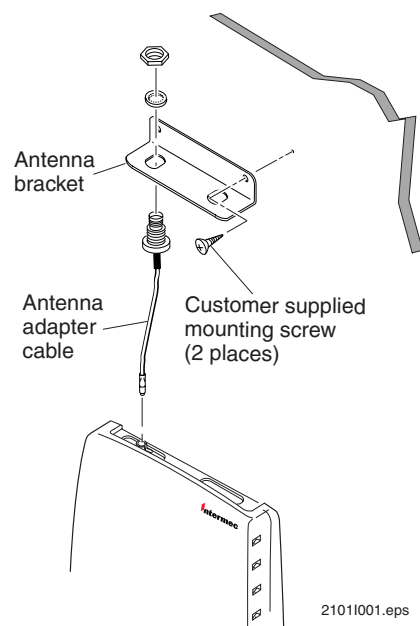

To install the antenna bracket

- 1** Mount the antenna bracket to a wall using screws appropriate for the mounting surface, as shown in the illustration.
- 2** Attach an antenna adapter cable to the antenna connector on the access point.
- 3** Insert the other end of the antenna adapter cable through one of the holes in the antenna bracket.
- 4** Insert the washer and nut on the antenna adapter and then tighten the nut.

Now that you have installed the antenna bracket, you can attach an external antenna to the antenna adapter cable. For recommended distances between antennas, refer to the *MobileLAN access System Manual* (P/N 067150). For help, see the instructions that shipped with the external antenna, or consult your local Intermec representative.



Technologies Corporation
6001 36th Avenue West
Everett, WA 98203
U.S.A.

www.intermec.com

© 2002 Intermec Technologies Corp.
All Rights Reserved

MobileLAN access 2101 Antenna Bracket Instruction Sheet



070199-002