



CK31 Protective Boot Instructions


The CK31 Protective Boot enhances the durability and ruggedness of the CK31 Handheld Computer. These instructions explain how to install the boot on a CK31. Before using the protective boot, please read these instructions and save them for future reference.

Installing the Protective Boot on the CK31

The protective boot fits very securely over the CK31 and provides an external stylus holder.

To install the protective boot

- 1 Remove the stylus from the CK31 and lay the protective boot on a flat surface.
- 2 Insert the scanner end of the CK31 into the protective boot.

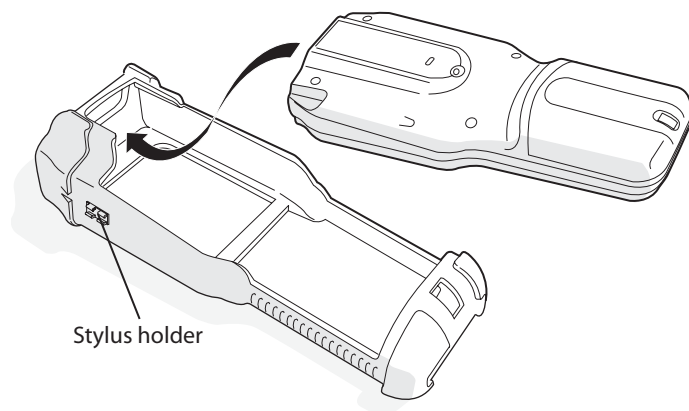

- 3 Pull the bottom of the protective boot over the serial port end of the CK31.
- 4 Insert the stylus into the holder on the protective boot.

You cannot replace a battery or insert the CK31 into a charging or communications dock with the protective boot installed.

To replace a battery or insert the CK31 into a dock

- 1** Remove the protective boot from the serial port end of the CK31.
- 2** Replace the battery or insert the CK31 into a communications or charging dock.



6001 36th Avenue West
Everett, Washington 98203
U.S.A.

tel 425.348.2600

fax 425.355.9551

www.intermec.com

© 2005 Intermec Technologies
Corporation. All rights reserved.

CK31 Protective Boot Instructions



P/N 075446-001