

Vehicle Dock Mounting Kit Instructions



You can use the vehicle dock mounting kit to install a vehicle dock on your vehicle. This kit includes:


- One RAM™ mount
- Four #8 screws
- Four #10 screws
- Four Nylok nuts
- One optional offset plate

To install the mounting kit

- 1** If you need additional cable clearance between the vehicle dock and the RAM mount, use four #8 screws to attach the offset plate to the vehicle dock.
- 2** If you attached the offset plate in Step 1, use four #10 screws and the Nylok nuts to attach the RAM mount to the offset plate.

If you are not using the offset plate, use four #8 screws to attach the RAM mount directly to the vehicle dock.

- 3** Attach the RAM mount base to a solid surface on your vehicle.

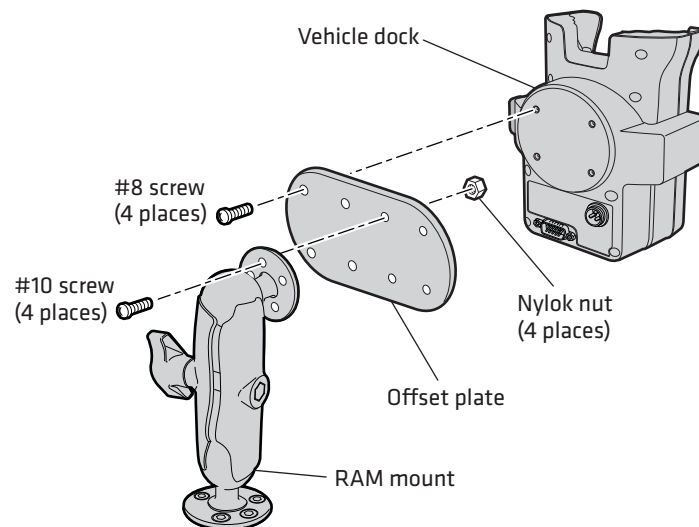

The CK3 vehicle dock is shown as an example.

Vehicle Dock Mounting Kit Instructions



P/N 943-095-002



Worldwide Headquarters
6001 36th Avenue West
Everett, Washington 98203
U.S.A.

tel 425.348.2600

fax 425.355.9551

www.intermec.com

© 2008 Intermec Technologies
Corporation. All rights reserved.