




## CK61NI Plug Kit Instructions

Use a serial port cover and headphone jack plug to seal out dust and airborne particles for Division 2 Class II and III environments. The CK61NI Plug Kit (P/N 203-870-001) contains five each of the serial port covers and headphone jack plugs.


### To install the CK61NI serial port cover

- 1 Attach the serial port retainer cord to either the right or left side of your CK61NI.
- 2 Install the serial port cover on the CK61NI.

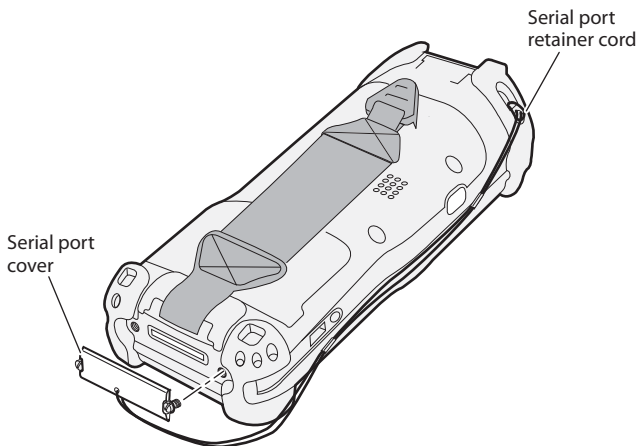

**To install the CK61NI headphone jack plug**

- 1 Attach the headphone jack retainer cord to the right side of the CK61NI.
- 2 Insert the plug into the headphone jack.

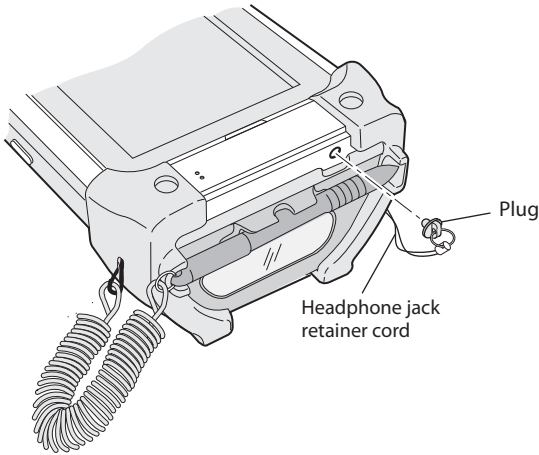

**Worldwide Headquarters**

6001 36th Avenue West  
Everett, Washington 98203 ;  
U.S.A.

**tel** 425.348.2600

**fax** 425.355.9551

[www.intermec.com](http://www.intermec.com)

© 2007 Intermec Technologies  
Corporation. All rights reserved.

**CK61NI Plug Kit Instructions**



P/N 943-158-001