

Intermec
 Corporate Headquarters
 6001 36th Avenue West
 Everett, Washington 98203 U.S.A.
 tel 425.348.2600
 www.intermec.com
 © 2005 Intermec Technologies Corporation. All rights reserved.



The Intermec CK60 Handheld Computer Bumpers (p/n: 203-710-001) help protect your CK60 from the normal bumps and occasional drops that happen during its use.

1 To remove the damaged bumpers use a T-10 driver and remove the top and bottom screws from each of the four corner Bumpers.

2 Attach the new bumpers using the replacement black #6-32 x 3/4 cap screws on the back side and #6-32 x 3/16 silver cap head screws on the top side. Use the T-10 driver to tighten the screws. The recommended torque is 5 in-lbs. Ensure that the honeycomb part of the bumper is on the back side of your CK60.

Instructions

Intermec
 Corporate Headquarters
 6001 36th Avenue West
 Everett, Washington 98203 U.S.A.
 tel 425.348.2600
 www.intermec.com
 © 2005 Intermec Technologies Corporation. All rights reserved.



The Intermec CK60 Handheld Computer Bumpers (p/n: 203-710-001) help protect your CK60 from the normal bumps and occasional drops that happen during its use.

1 To remove the damaged bumpers use a T-10 driver and remove the top and bottom screws from each of the four corner Bumpers.

2 Attach the new bumpers using the replacement black #6-32 x 3/4 cap screws on the back side and #6-32 x 3/16 silver cap head screws on the top side. Use the T-10 driver to tighten the screws. The recommended torque is 5 in-lbs. Ensure that the honeycomb part of the bumper is on the back side of your CK60.

Instructions

Intermec
 Corporate Headquarters
 6001 36th Avenue West
 Everett, Washington 98203 U.S.A.
 tel 425.348.2600
 www.intermec.com
 © 2005 Intermec Technologies Corporation. All rights reserved.



The Intermec CK60 Handheld Computer Bumpers (p/n: 203-710-001) help protect your CK60 from the normal bumps and occasional drops that happen during its use.


1 To remove the damaged bumpers use a T-10 driver and remove the top and bottom screws from each of the four corner Bumpers.

2 Attach the new bumpers using the replacement black #6-32 x 3/4 cap screws on the back side and #6-32 x 3/16 silver cap head screws on the top side. Use the T-10 driver to tighten the screws. The recommended torque is 5 in-lbs. Ensure that the honeycomb part of the bumper is on the back side of your CK60.

Instructions

Intermec


Instructions

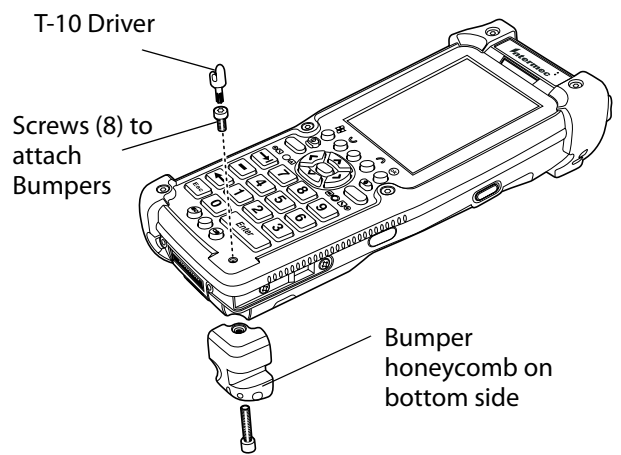

CK60 Handheld Computer Bumpers

Intermec


Instructions

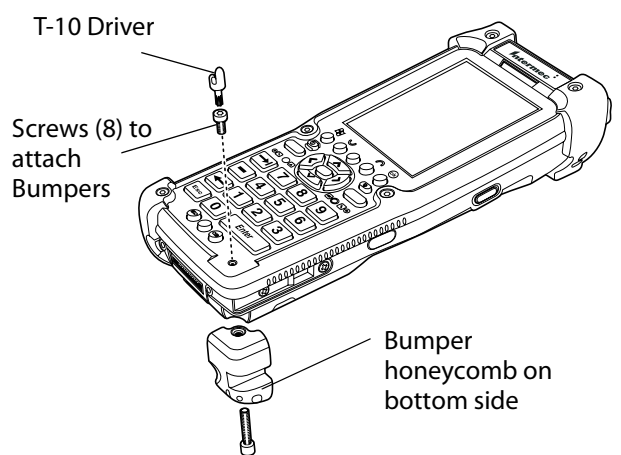

CK60 Handheld Computer Bumpers

Intermec

Instructions

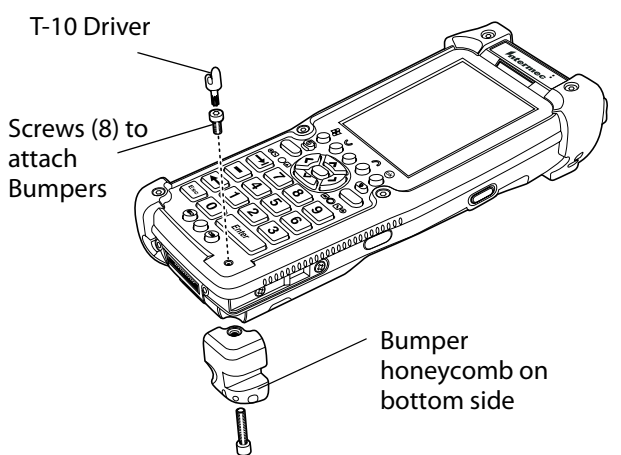

CK60 Handheld Computer Bumpers